 




# Sharki User Manual

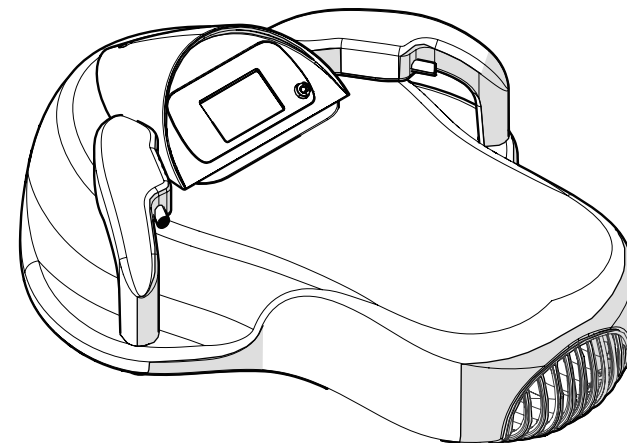

Thank you for your purchase of the electric kickboard. To ensure that you have the full knowledge of this product and your safety for use, please read this user manual carefully, and keep it safely in case of future reference.

## Packing List

No.	Item	Quantity
1	Electric Kickboard	1
2	Charger	1
3	Adapter	1
4	User Manual	1
5	Qualified Certificate	1



### Product Summary

- The main body of this electric kickboard is made using the method of blow molding and injection molding. It has an independently designed battery box with a waterproof rating of IP67, and is easy for installation and removal. The user can remove and replace the battery in seconds.
- This product has a unique shape that reduces the water resistance during operation, and has positive buoyancy on its own.
- This product has intelligent control system, giving two experience modes (standard and sports) with a single speed level under each mode.
- The intelligent control system has auto protection for this product including automatic standby and shut down.
- This product has a mounting position hole for camera.

## Product Specifications

SPECIFICATIONS	DETAILS
Model	W6
Colour	Sea Blue / Lemon Yellow
Package Dimension	22 x 18 x 9 in / 55 x 45 x 23cm
Gross Weight	10.3 lb / 4.7 KG
Net Weight	7.9 lb / 3.6 KG
Loaded Weight	88.2 lb / 40 KG
Speed on Water	1m/s; 1.5m/s
Material of Kickboard	ABS+PC
Dimension of Kickboard	19 x 16 x 7 in / 49 x 40 x 17cm
Blades Dimension	Trefoil with diameter of 3.0 in / 7.5cm
Propellers Rotation Speed	6000 rounds
Propeller Power	350W
Propeller Material	Aluminium Die Casting
Propeller Installation	Stand Alone Suspension
Battery Installation	Quick plug-in Self locking structure
Battery Power	100Wh
Battery Settings	24V 5AH (standard)
Adapter	DC25.2V
Charging Method	Contact Charging
Charging Time	2-4 h
Runtime	30-60 minutes
Waterproof Rating	IP67

## Product Introduction

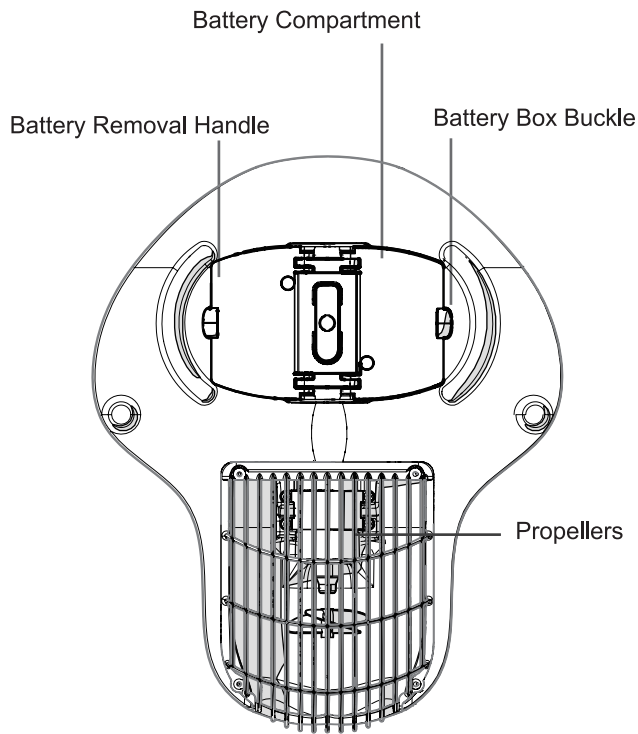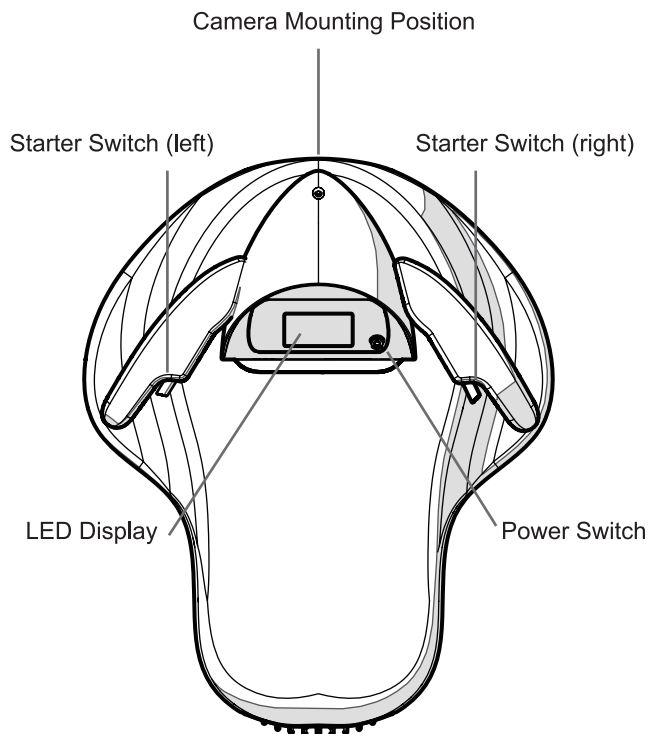


### Warning

- Only put the product into water after the battery box has been properly locked in.
- Do not insert fingers or other objects into the propellers.

## Product Description

### 1. Battery Box Installation

- Hold the left and right cover of the battery box with either hand, and insert the battery box into the battery compartment on the bottom of the electric kickboard in the right direction.
- After that, lock the battery box by pushing the buckles on either side of the battery box cover, as indicated in graph 1, 2, 3.

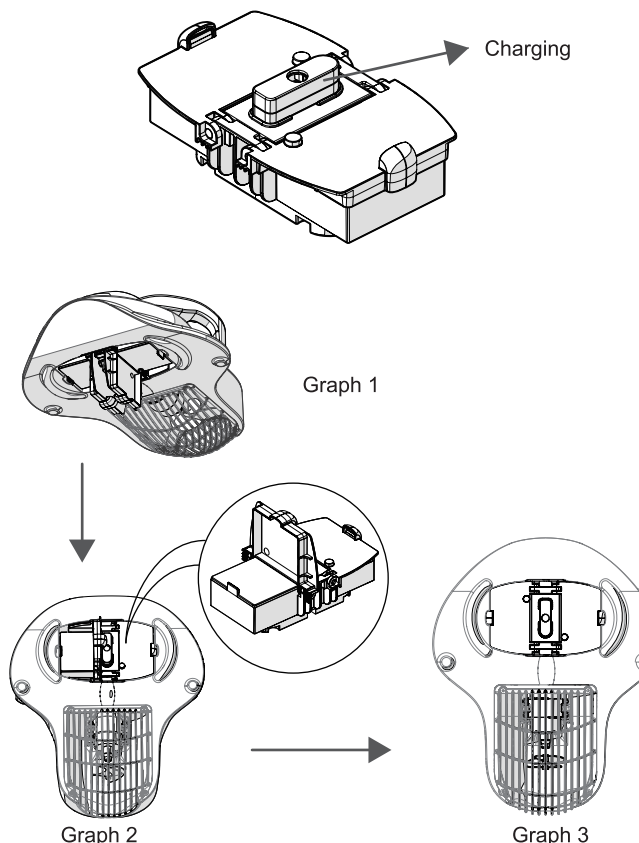

### 2. Charging

- For charging the product, connect the charging port side to the DC adapter, which is then connected to the battery box (without pushing too hard against it). After that, insert the charger to the wall plug for charging.
- When the indicator glows red, it means the battery is being charged. When it turns into green, then the battery is fully charged. Please stop charging then, as overcharging will have a negative impact on the life of the battery. When the product is not in use for long period of time, please charge it for once a month in case the battery get damaged due to over discharging.
- After the charging, disconnect the DC adapter to the battery box, and unplug the charger. When the product is not in use, place it in a cool, dry environment for storing.

### Notice

- When you recharge the battery in full after it runs out, due to the circuit protection it cannot be restarted immediately. To activate the battery, please take the it out of the battery compartment and then put it back again.
- During the charging process, keep the charging port dry, and never allow the charging plug or charger to come into contact with water, as this may cause electric shock. Do not touch them with wet hands. Unplug the charger whenever there is a faulty during the charging.
- Please unplug the charger by pulling the plug rather than pulling the charging cable. If there is apparent damage to the charger plug or the charging cable, please replace it immediately.
- During the charging process, make sure the power of the product has been switched off and do not allow children to bite or touch it.

### How to Use

- Press and hold the power switch for 3 seconds to turn on the LED screen. There are two operation modes. (1) Standard Mode (normal speed level) as default where the user needs to press the starter switch on both sides simultaneously to get it running. (2) Tap the power switch again to enter the Sports Mode (high speed level) where the user also needs to press both switch at the same time to get the product start running.
- Press and hold the power switch for 5 seconds to turn it off. When the product is left unused for 5 minutes, it will enter the standby mode, and will shut down automatically after it hasn't been used for 10 minutes.
- To use the product, turn on the power, lie on the kickboard and hold both handles simultaneously. You can adjust the speed level according to your own needs.
- During the use, to turn left or right, simply tilt the body left or right.

### Tips

- This electric kickboard cannot be used as a piece of water rescue equipment. Do not use it in swift water.
- Please first turn on the power and check if the propellers can work normally before putting it into water for real use, and recharge it after each use.

### Precautions

- Minors under 8 years of age must be under adult supervision to use the product.
- Do not use it in swift water or turbulent vortex.
- Do not stand or stampede on the electric kickboard.
- Do not touch the propellers while the product is running.
- Do not put it into water when the battery box cover hasn't locked properly.
- Do not dismantle the propellers without authorization.
- Do not dismantle the controlling components without authorization.
- Do not bump or drop it violently.
- Keep it away from flames or open fire.

### Warranty

#### 1. Scope of Free Warranty Service

- For products that meet the warranty conditions (excluding point 2 as outlined below), we provide free repair, replacement and return services, excluding postage and shipping costs.
- The free one-year warranty services are provided for the product body excluding the consumables, i.e. silicone ring, battery box buckles, battery box handles, cover for propellers, etc. Damage to the battery by over-discharge due to being not in use for long time is not covered by the warranty.

#### 2. Not Eligible for Free Warranty

- The product has been held for more than one year after purchase.
- The product damage was caused by use, or installation steps that did not comply with what has been specified in the user manual.
- The product damage was caused by dismantle or repair unauthorized by the company (the manufacturer or the dealer).
- The product damaged was caused by accidents or misuse, such as physical damage, drop, impact, severe oxidation, etc.
- The product damaged was caused by abnormal storage conditions or force majeure such as fire, liquid soaking, freezing, earthquake, etc.
- The product failure or damage was caused by problems other than product design, technology, manufacturing, quality, etc.


#### 3. Maintenance Service Policy

- For repairs and maintenance beyond the free warranty scope or not eligible for free warranty, our after-sales service center or the product distribution site will provide paid services.
- Users can call the company's official after-sale service phone number directly, or contact the dealer where the product was purchased to be avail of the after-sales service.
- The company will inform the user about the cause and responsibility of the failure, the cost and the estimated completion time of repair within 3 working days upon receiving the user's faulty product.
- If the user has no objection to the feedback of the company, such as the cause and responsibility of the failure, the cost and the estimated completion time of the repair, etc., the company will start the repair process.



# Sharki儿童电动冲浪浮板

## 产品使用说明书

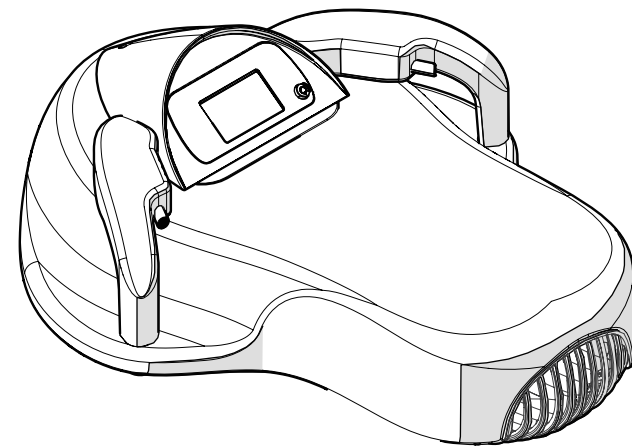

非常感谢您购买本公司的电动冲浪浮板，为保证您能充分了解和正确使用本产品，请您务必仔细阅读说明书。阅读后请妥善保管，以备以后参考之用。

深圳市哈威飞行科技有限公司

### 装箱清单

序号	序号	序号
1	动力浮板	1台
2	充电器	1个
3	充电转接头	1个
4	说明书	1份
5	合格证	1份



### 产品概述

- 1、动力浮板主体采用吹塑注塑成型，独立防水设计的电池箱，方便拆卸与安装，用户可秒拆更换电池，防水等级IP67。
- 2、动力浮板特殊的外观形状，减少运行过程中水的阻力。动力浮板自身带有浮力。
- 3、动力浮板采用智能控制系统，两种体验模式（标准模式与运动模式）。两个速度档位。
- 4、动力浮板的智能调控系统对产品有自动保护功能，能自动待机与自动关机。
- 5、动力浮板预留有相机支架孔位。

### 产品信息

名称	规格
产品型号	W6
产品颜色	海洋蓝/柠檬黄
包装尺寸	55 x 45 x 23cm
产品毛重	4.7KG
产品净重	3.6KG
带载重量	40KG
水面速度	1m/s;1.5m/s
浮板材质	塑胶
浮板尺寸	49x40x17cm
桨叶规格	三叶全浸桨直径7.5mm
推进器转速	6000转
推进器功率	350W
推进器材质	铝合金压铸
推进器安装方式	独立悬挂式
电池安装方式	快速插拔自锁结构
能量	100Wh
电池配置	标配24V 5AH
适配器	DC25.2V
充电方式	接触式
充电时间	2-4小时
续航里程	30-60分钟
防水等级	IP67

### 产品简介

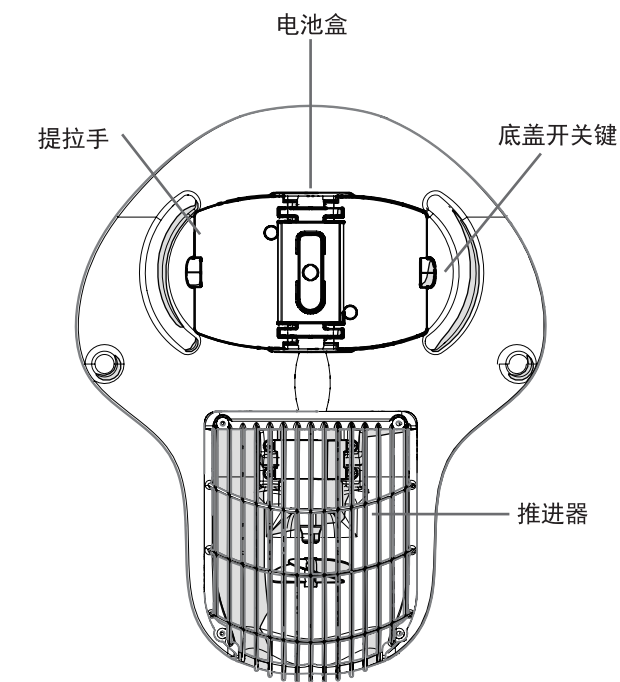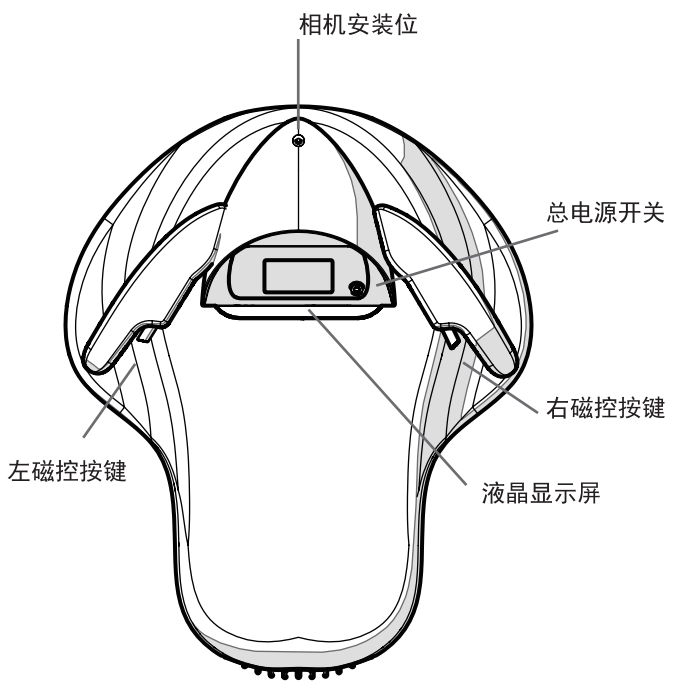





### 警告

- 1、电池卡紧后，才可下水。
- 2、禁止将手或其他异物塞入推进器里面。

### 产品说明

#### 1、电池盒的安装说明

- ①双手分别握住电池盒左右盖板，将电池盒以正确的方向放入浮板底部的电池仓内。
- ②然后将电池盒盖板盖下与卡扣卡紧。如图1、2、3所示。

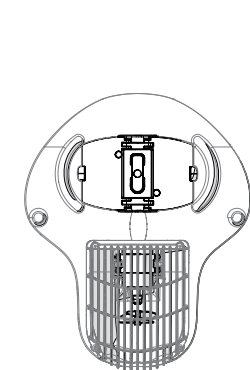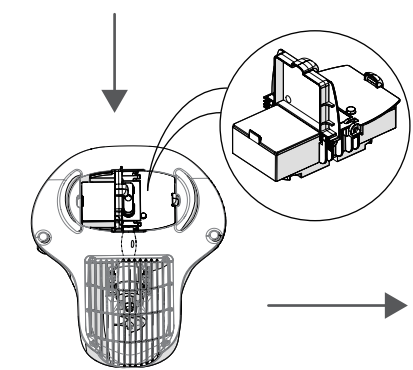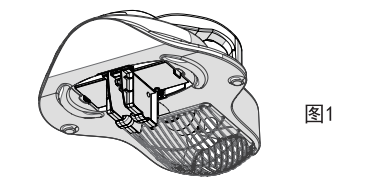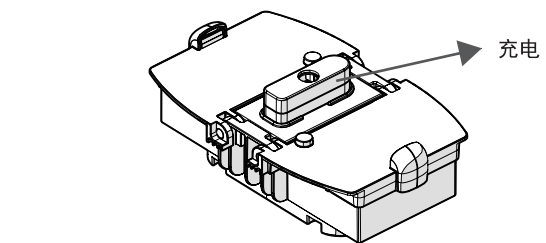

#### 2、充电事项

- ①充电时，先将用充电器的圆孔端插到DC转接头上，再将转接头插在电池箱上，转接头无需用力按下，然后将充电器的另一端接上墙插即可给电池箱充电。
- ②充电器上的指示灯亮红色，表示正在充电；指示灯由红色变为绿色，表示电池箱电量已充满。此时请停止充电，长时间充电会影响电池寿命。长时间不用时，请保持1个月充电1次，避免电池过放导致损坏。
- ③充电完成后，取下电池箱上的DC转接头，在拔掉充电器即可。产品不用时，置于干燥、通风的环境下存储。充电完成后，取下电池箱上的DC转接头，在拔掉充电器即可。产品不用时，置于干燥、通风的环境下存储。

#### 提示

- ①电池用完，重新充满电并再次开机时，因为电池的自我保护作用，不能立即启动。需要将电池从电池仓拿出后再次放入电池仓，机器才能启动。
- ②充电时，请确保充电口干燥无水，禁止充电转接头或充电器与水接触，切勿用湿手触摸，因为这可能导致触电。在充电过程中，如果出现任何故障，立即拔掉电源插头。
- ③拔出电源插头时，需要捏紧插头拔出，不要拉扯电源线拉出插头。若充电器或充电线有明显损坏，请及时更换。
- ④产品在充电时，须关闭总电源开关，请勿让婴幼儿儿童啃食或触摸。

### 使用说明

- 1、按住总电源开关3秒，液晶屏亮起，开机。机器共有两种运行模式：(1)开机默认标准模式（常速挡），左右磁控开关同时按下方可使用；(2)再次轻触总电源开关进入运动模式（高速挡），左右磁控开关同时按下方可使用。
- 2、按住总电源开关5秒，系统关机。产品停止使用5分钟后，系统自动待机，10分钟后则自动关机。
- 3、使用产品时，先打开电源总开关，身体趴在浮板上，双手分别握住左右磁控手柄。可根据自身需求调整速度档位。
- 4、动力浮板左右转向时，可微倾斜身体即可拐弯。
- 5、动力浮板主体可单独作为游泳浮板使用。

#### 提示

- ①动力浮板不可代替救生用品，请勿在急流环境下使用。
- ②产品下水前请先开启电源，检查是否能正常使用。使用后请立即充电。

### 注意事项

- 1、8岁以下未成年人必须在成人监护下使用。
- 2、禁止在水流湍急旋涡等环境下使用。
- 3、禁止在动力浮板上站立或踩踏使用。
- 4、禁止在动力浮板运行时触碰螺旋桨。
- 5、禁止在底盖没锁紧时下水。
- 6、禁止私自拆卸推进器。
- 7、禁止私自拆卸控制器。
- 8、禁止撞击、暴力摔放。
- 9、禁止接触或靠近明火。

### 注意事项

#### 1、保修服务范围

- ①本公司产品实行国家相关三包规定，对于符合保修条件的产品提供免费维修、换货和退货服务。除邮递费、运输费用外，保修服务免费提供。
- ②整机保修一年，易损件不在保修范围内，如：硅胶圈、电池卡扣、电池手把座、推进器防护罩等。电池箱因长时间未充电导致电池电量过放的损坏，不在保修范围内。

#### 2、保修免责范围

- ①产品购买超过1年。
- ②未按说明书要求安装或使用造成的任何损坏。
- ③未经我司官方授权人员同意擅自拆装或维修。
- ④意外因素或使用不当导致产品损坏，如机械破坏、摔坏、撞击、产品严重氧化等。
- ⑤火灾、液体浸泡、冻结、地震等非正常存储条件或不可抗力导致的任何损坏。
- ⑥其它非产品本身设计、技术、制造、质量等问题而导致的故障或损坏。

#### 3、产品维修服务政策

- ①超过“三包”服务期限和范围内的维修，我司售后服务中心或由产品经销地点提供有偿服务。
- ②用户可通过拨打本公司官方服务电话寻求售后帮助，或直接联系产品购买处的经销商协助售后服务。
- ③在收到用户故障产品的3个工作日内，我司将向用户报告产品故障原因分析、故障责任、维修费用以及预计维修完成的时间。
- ④用户对故障原因、故障责任、维修费用和维修完成时间等事项无异议后，我公司开始对产品进行维修处。