

# Brookstone®

---

## Ultimate Foot Spa

WITH MASSAGING JETS AND HEAT



## TABLE OF CONTENTS

Warnings and Cautions.....	2
FCC Information.....	7
Care and Maintenance.....	9
Specifications.....	9
Location of Parts and Controls.....	10
Foot Spa Operation.....	14
Filling the Foot Spa with Water.....	14
Installing/Replacing the Remote Control Battery.....	14
Using the Foot Spa.....	15
Adding Air to Jets.....	15
Using Heat.....	16
Using the Massage Nodes.....	17
Using Programs.....	17
Adding Bubbles.....	18
Using the Lights.....	18
Using the Pumice Stone.....	18
Using the Brush.....	19
Draining Water from the Foot Spa.....	19
Warranty.....	20

## CAUTION

- TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER. THERE ARE NO SERVICEABLE PARTS INSIDE.
- TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.



The lightning flash with arrow-head symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated “dangerous voltage” within the unit’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the unit.

## IMPORTANT SAFETY INSTRUCTIONS

All of the safety and operating instructions should be read, adhered to and followed before the unit is operated.


## SAVE THESE INSTRUCTIONS

## GROUNDING INSTRUCTIONS

This product must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for the electric current to reduce the risk of electric shock. This product is equipped with a cord or an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

**DANGER** – Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service technician if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product – if it will not fit the outlet, have a proper outlet installed by a qualified technician.

This product is for use on a nominal 120V circuit and has a grounding plug that looks like the plug illustrated below. Make sure the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.

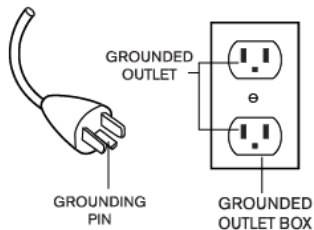

**This Foot Spa is intended for household use only.**

## SAVE THESE INSTRUCTIONS

### IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed.

Read all instructions before using this Foot Spa.

**⚠ DANGER** – To reduce the risk of electric shock:

1. Always unplug this appliance from the electrical outlet immediately after using and before cleaning.
2. Do not reach for an appliance that has fallen into water. Unplug immediately.
3. Do not use while bathing or in a shower.
4. Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
5. Do not use wet hands to connect or disconnect the power plug from the electrical outlet.
6. Do not operate during a lightning storm.
7. Although operation will be stopped automatically by the Auto-Timer function, always remember to turn off the main power after use.
8. Do not operate the foot spa with a damaged cord or with an extension cord.
9. Do not use the foot spa if the electrical outlet is loose.

10. Check that the Alternating Current (AC) voltage corresponds with the specification indicated for the foot spa.

**⚠ WARNING** – To reduce the risk of burns, fire, electric shock or injury to persons:

1. This foot spa should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.
2. Do not operate under blanket or pillow. Excessive heating can occur and cause fire, electric shock or injury to persons.
3. Close supervision is necessary when this foot spa is used by, on or near children, invalids or disabled persons.
4. Use this foot spa only for its intended use as described in this manual. Do not use attachments not recommended by Brookstone.
5. Never operate this foot spa if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water.
6. Do not move or carry this foot spa by the power cord or use cord as a handle.
7. Keep the cord away from heated surfaces.
8. Never operate the foot spa with the air openings blocked. Keep the air openings free of lint, hair and the like.
9. Never drop or insert any object into any opening.
10. Do not use outdoors.
11. Do not operate where aerosol (spray) products are being used or where

oxygen is being administered.

12. To disconnect, turn all controls to the OFF position, then remove the plug from the outlet.
13. Use heated surfaces carefully. May cause serious burns. Do not use over insensitive skin areas or in the presence of poor circulation. The unattended use of heat by children or disabled persons may be dangerous.
14. Connect this foot spa to a properly grounded outlet only. See Grounding Instructions on page 2.
15. This foot spa is not intended for use by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of this foot spa by a person responsible for their safety.
16. Children should be supervised to ensure that they do not play with this foot spa.
17. Any individual who may be pregnant, or recently gave birth, has a heart condition, or a pacemaker, suffers from diabetes or other sensory impairment, phlebitis and/or thrombosis, joint dysfunction, inflammation or injuries, weak bones, osteoporosis, a high fever, an abnormal or curved spine, is at an increased risk of developing blood clots, has pins/screws/artificial joints or other medical devices implanted in his/her body, is being treated for a medical condition or physical injury or is under a doctor's care should consult with a medical professional before using this foot spa.
18. This product is not intended for self-treatment of conditions that should be managed by a qualified healthcare provider.

19. This foot spa is designed as a non-professional massager to soothe tired and aching muscles. It is not intended to be a substitute for medical attention. If your ailments and symptoms persist or worsen after use, contact your physician immediately.
20. Do not use the foot spa if you are not feeling well.
21. Stop operation immediately if you experience any discomfort.
22. Do not fall asleep during the massage session.
23. Do not operate after taking pain killers, sedatives or alcohol.
24. Do not stand on or in this foot spa. Use only while seated.
25. Always position the foot spa on a flat, level surface.
26. Do not disassemble any part of the foot spa. Touching the internal components may result in malfunction or electric shock.
27. The foot spa must only be professionally serviced or repaired. Do not attempt to disassemble or repair the foot spa yourself.
28. Do not perform continuous massage on the same spot of your body for more than 5 minutes at a time as this may result in excessive stimulation and may have adverse effects.
29. Never use the foot spa on open skin eruptions, swollen or inflamed areas.
30. If the power goes off during use, be sure to turn the power switch to the OFF position and pull the power plug out from the socket to prevent damage from occurring when the power is restored.
31. **WARNING: Chemical Burn Hazard.** Keep batteries away from children.
32. This product contains a lithium button/coin cell battery. If a new or used lithium button/coin cell battery is swallowed or enters the body, it can cause severe

internal burns and can lead to death in as little as 2 hours. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

## FCC INFORMATION

**Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

**WARNING:** To comply with FCC's RF radiation exposure limits for general population/ uncontrolled exposure, the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be collocated or operating in conjunction with any other antenna or transmitter.

This equipment complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This equipment may not cause harmful interference.
2. This equipment must accept any interference received, including interference that may cause undesired operation.

## BATTERY PRECAUTIONS

- Dispose of used batteries properly. Do not dispose of batteries in a fire.
- Do not leave the batteries where a child or pet could play with or swallow them. If the batteries are swallowed, contact a physician immediately.
- The batteries may explode if mistreated. Do not attempt to recharge or disassemble the batteries.
- Use only fresh batteries of the required size and type. Do not mix old and new batteries, different types of batteries, or rechargeable batteries of different capacities.

## CARE AND MAINTENANCE


- Remove the power cord from the electrical outlet and let the foot spa cool before cleaning.
- Do not use scouring cleaning agents, benzene, kerosene or cleaning agents for glass or furniture. Clean the unit only with a soft, slightly wet cloth.
- Do not use a brush to clean the unit.

## SPECIFICATIONS

Rated Voltage .....	120VAC
Frequency .....	60Hz
Wattage Max .....	1,000W
Capacity .....	2 Gallons
Product Weight .....	12.58lbs (5.8kg) (approximately)
Product Dimensions ....	18.93" (481mm) w x 16.35" (416 mm) d x 9.4" (239mm) h


## LOCATION OF PARTS AND CONTROLS

- |                                |                              |
|--------------------------------|------------------------------|
| 1. Splash Cover                | 7. Brush                     |
| 2. Air Holes (18)              | 8. Pumice Stone              |
| 3. Max Fill Line               | 9. Control Panel             |
| 4. Jets (4)                    | 10. Massage Node Holders (6) |
| 5. Removable Massage Nodes (2) | 11. Tool Tray Cover          |
| 6. Remote Control              |                              |

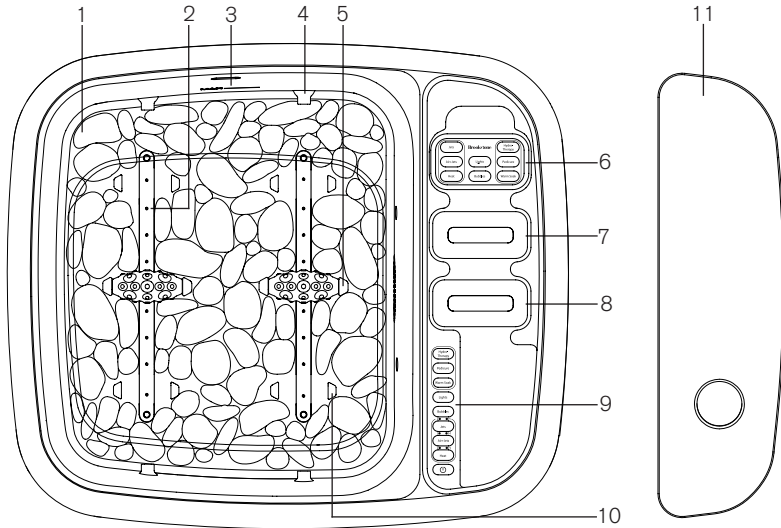


## LOCATION OF PARTS AND CONTROLS

 - |   |
|---|
| 12. Hydrotherapy Program Button               |
| 13. Pedicure Program Button                   |
| 14. Warm Soak Program Button                  |
| 15. Lights Button                             |
| 16. Bubbles Button                            |
| 17. Jets Low Intensity LED Indicator          |
| 18. Jets Button                               |
| 19. Air and Jets Low Intensity LED Indicator  |
| 20. Air and Jets Button                       |
| 21. Low Heat LED Indicator                    |
| 22. Heat Button                               |
| 23. Power Button                              |
| 24. High Heat LED Indicator                   |
| 25. Air and Jets High Intensity LED Indicator |
| 26. Jets High Intensity LED Indicator         |

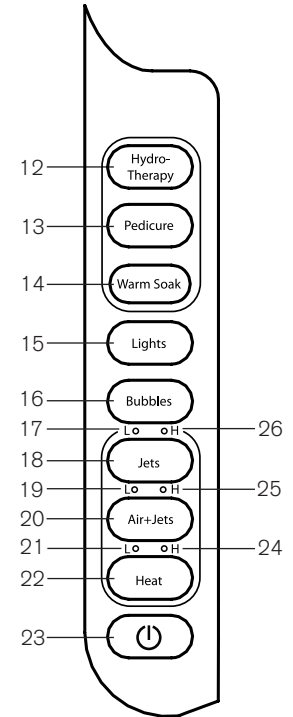


## LOCATION OF PARTS AND CONTROLS

 - 27. Remote Control
- 28. Jets Button
- 29. Air and Jets Button
- 30. Heat Button
- 31. Bubbles Button
- 32. Warm Soak Program Button
- 33. Pedicure Program Button
- 34. Hydrotherapy Program Button
- 35. Lights Button
- 36. Brush
- 37. Pumice Stone

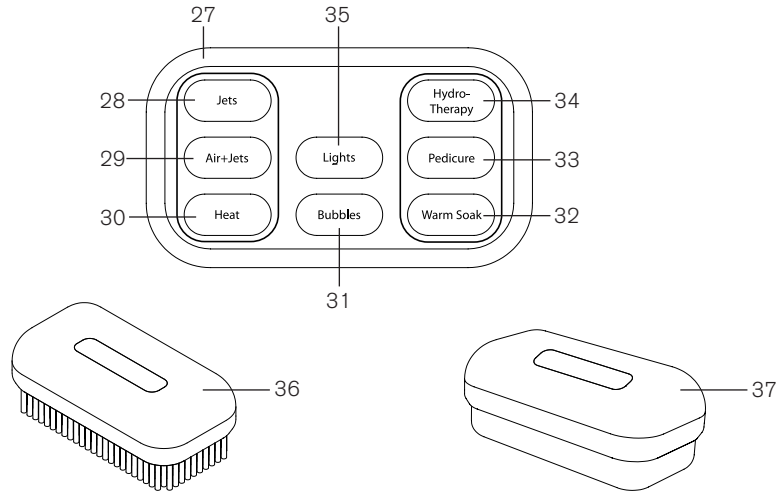

## LOCATION OF PARTS AND CONTROLS

 - 38. Carrying Handles (2)
- 39. Water Drain Plug
- 40. Cord Wrap
- 41. Battery Door (Remote Control)

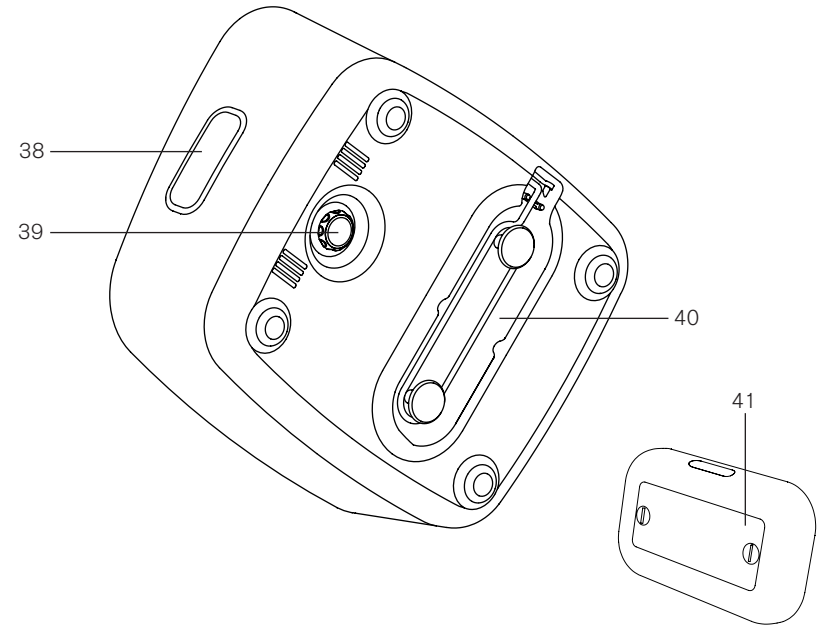



## FOOT SPA OPERATION

### FILLING THE FOOT SPA WITH WATER

Make sure the foot spa's power cord is not inserted into an electrical outlet and that the foot spa is off.

1. Remove the SPLASH COVER.
2. Fill the foot spa with water up to the MAX FILL LINE.
3. Replace the SPLASH COVER.

**Note:** Do not add bath salts, oils or crystals to the water, as residue may build up and clog the AIR HOLES.

**Important!** The Foot Spa will not function without water.

### INSTALLING/REPLACING THE REMOTE CONTROL BATTERY

1. Remove the screws on the REMOTE CONTROL BATTERY DOOR and remove the door.
2. Place the included CR2032 button cell battery into the battery compartment according to the polarity indicator. If replacing battery, insert new CR2032 button cell battery.
3. Replace the REMOTE CONTROL BATTERY DOOR and secure screws.

## USING THE FOOT SPA

The foot spa has four rotatable JETS and two jet speeds allowing you to customize your massage.

1. With the foot spa filled with water, insert the power cord into an electrical outlet.
2. Press the POWER BUTTON on the CONTROL PANEL. The JETS activate on low intensity. The JETS LOW INTENSITY INDICATOR illuminates.
3. To change between High and Low intensity, press the JETS BUTTON on the CONTROL PANEL or the REMOTE CONTROL. The JETS HIGH INTENSITY INDICATOR or JETS LOW INTENSITY INDICATOR will illuminate depending on your selection.
4. Press the POWER button to turn the foot spa off.

**Note:** The JETS will not function without water in the foot spa.

### ADDING AIR TO JETS

1. Press the AIR AND JETS BUTTON on the CONTROL PANEL or the REMOTE CONTROL to activate on low intensity. The AIR AND JETS LOW INTENSITY INDICATOR illuminates.
2. To change between High and Low intensity press the AIR AND JETS BUTTON on the CONTROL PANEL or the REMOTE CONTROL. The AIR AND JETS INTENSITY INDICATOR or AIR AND JETS LOW INTENSITY INDICATOR will illuminate depending on your selection.

## USING HEAT

The heat feature helps relax tight, sore muscles and relieves tension. The exclusive warming system achieves and maintains the optimum water temperature throughout the entire session, eliminating the need to add hot water.

1. Press the HEAT BUTTON on the CONTROL PANEL or REMOTE CONTROL to activate Low Heat. The LOW HEAT LED INDICATOR will illuminate.
2. Press the HEAT BUTTON again on the CONTROL PANEL or REMOTE CONTROL to activate High Heat. The HIGH HEAT LED INDICATOR will illuminate.
3. Press the HEAT BUTTON again on the CONTROL PANEL or REMOTE CONTROL to turn the heat off.

### Notes:

- Heat can only be used when the foot spa is filled with water and the JETS are activated. Pressing the HEAT BUTTON will activate the JETS.
- For optimal results, fill the unit with room temperature (or warmer) water.
- If the water feels too warm, the water temperature may be regulated by turning heat off, and turning it back on when water cools.
- For best results, place feet in room temperature water prior to turning heat on.

## USING THE MESSAGE NODES

The MESSAGE NODES allow stimulation of important reflexology zones, helping to alleviate stress-related problems.

1. Press the REMOVABLE MESSAGE NODES securely into any of the six available MESSAGE NODE HOLDERS.
2. Roll your feet over the MESSAGE NODES for a kneading massage.

## USING PROGRAMS

1. Press the HYDROTHERAPY PROGRAM BUTTON on the CONTROL PANEL or REMOTE CONTROL to activate the Hydrotherapy program. Press the HYDROTHERAPY PROGRAM BUTTON again on the CONTROL PANEL or REMOTE CONTROL to deactivate the Hydrotherapy program.
2. Press the PEDICURE PROGRAM BUTTON on the CONTROL PANEL or REMOTE CONTROL to activate the Pedicure program. Press the PEDICURE PROGRAM BUTTON again on the CONTROL PANEL or REMOTE CONTROL to deactivate the Pedicure program.
3. Press the WARM SOAK PROGRAM BUTTON on the CONTROL PANEL or REMOTE CONTROL to activate the Warm Soak program. Press the WARM SOAK PROGRAM BUTTON again on the CONTROL PANEL or REMOTE CONTROL to deactivate the Pedicure program.

**Note:** Pressing any button will cancel the program.

## ADDING BUBBLES

1. Press the BUBBLES BUTTON on the CONTROL PANEL or the REMOTE CONTROL to add bubbles to your massage.
2. Press the BUBBLES BUTTON again on the CONTROL PANEL or the REMOTE CONTROL to turn bubbles off.

## USING THE LIGHTS

1. Press the LIGHTS BUTTON on the CONTROL PANEL or the REMOTE CONTROL to turn on green underwater lighting.
2. Press the LIGHTS BUTTON again on the CONTROL PANEL or the REMOTE CONTROL to change to blue underwater lighting.
3. Press the LIGHTS BUTTON again on the CONTROL PANEL or the REMOTE CONTROL to change to red underwater lighting.
4. Press the LIGHTS BUTTON again on the CONTROL PANEL or the REMOTE CONTROL to turn underwater lighting off.

## USING THE PUMICE STONE

Use the PUMICE STONE on the bottom of your feet to remove dry skin. For best results, soak your feet for at least 5 minutes. Wet the stone by dipping it into the water. Rub the stone in a circular motion over the skin.

## USING THE BRUSH

Use the BRUSH to scrub your feet.

## DRAINING WATER FROM THE FOOT SPA

1. Ensure the unit is off and disconnected from the electrical outlet.
2. Place the foot spa over your bathtub or sink.
3. Unscrew the WATER DRAIN PLUG and drain the water out of the foot spa. Towel dry the foot spa. Replace the WATER DRAIN PLUG.
4. Wind the power cord around the CORD WRAP underneath the foot spa.

## ONE (1) YEAR LIMITED WARRANTY

Brookstone® warrants this product against defects in materials and/or workmanship under normal use for a period of ONE (1) YEAR from the date of purchase by the original purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option, Brookstone will either 1) repair the defect at no charge, using new or refurbished replacement parts, or 2) replace the product with a new product that is at least functionally equivalent to the original product, or 3) provide a store credit in the amount of the purchase price of the original product. A replacement product or part, including a user-installable part installed in accordance with instructions provided by Brookstone, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Brookstone's property. When a store credit is given, the original product must be returned to Brookstone and becomes Brookstone's property.

**Obtaining Service:** To obtain warranty service, call Brookstone Limited Warranty Service at 1-800-292-9819. Please be prepared to describe the product that needs service and the nature of the problem. A purchase receipt is required. All repairs and replacements must be authorized in advance. Service options, parts availability and response times will vary. You are responsible for delivery and the cost of delivery of the product or any parts to the authorized service center for replacement, per our instructions.

**Limits and Exclusions:** Coverage under this Limited Warranty is limited to the United States of America, including the District of Columbia and the U.S. Territories of Guam, Puerto Rico, and the U.S. Virgin Islands. This Limited Warranty applies only to products manufactured for Brookstone that can be identified by the "Brookstone" trademark, trade name, or logo affixed to them or their packaging. The Limited Warranty does not apply to any non-Brookstone products. Manufacturers or

suppliers other than Brookstone may provide their own warranties to the purchaser, but Brookstone, in so far as permitted by law, provides these products "as is." This warranty does not apply to: a) damage caused by failure to follow instructions relating to product's use or the installation of components; b) damage caused by accident, abuse, misuse, fire, floods, earthquake or other external causes; c) damage caused by service performed by anyone who is not a representative of Brookstone; d) accessories used in conjunction with a covered product; e) a product or part that has been modified to alter functionality or capability; f) items intended to be periodically replaced by the purchaser during the normal life of the product including, without limitation, batteries or light bulbs; g) any product sold "as is" including, without limitation, floor demonstration models and refurbished items; or h) a product that is used commercially or for a commercial purpose.

**BROOKSTONE SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, BROOKSTONE DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF BROOKSTONE CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY.**

Some states disallow the exclusion or limitation of incidental or consequential damages or how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Find thousands more  
great ideas online

**Brookstone®**

941192

Merrimack, New Hampshire, USA 03054 • 800-846-3000 • Brookstone.com