

RAZER QUICK CHARGING STAND

MASTER GUIDE

If you're looking for the fastest way to keep your PS5™ DualSense™ wireless controller at prime power levels, then go for the perfect pairing with the Razer Quick Charging Stand.


CONTENTS

1. WHAT'S INSIDE / WHAT'S NEEDED	3
2. LET'S GET YOU COVERED	4
3. GETTING STARTED	5
A CAFETY AND MAINTENANCE	_
4. SAFETY AND MAINTENANCE	/
5. LEGALESE	8


1. WHAT'S INSIDE / WHAT'S NEEDED

WHAT'S INSIDE

Razer Quick Charging Stand

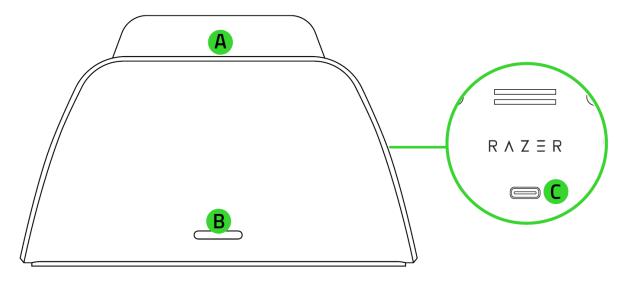

 - A. Charging connector
- B. Status indicator
- C. Type C port
- Type C to Type A cable




■ Important Product Information Guide

WHAT'S NEEDED

■ PS5[™] DualSense[™] wireless controller

2. LET'S GET YOU COVERED


You've got a great device in your hands, complete with a 1-year limited warranty coverage. Now maximize its potential and score exclusive Razer benefits by registering at razerid.razer.com

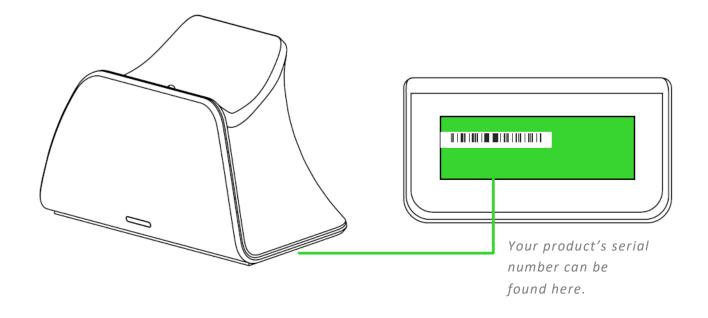

Got a question? Ask the Razer Support Team at support.razer.com


3. GETTING STARTED

1. Connect the charging stand to any of the available USB ports on your PS5™ console or to a USB power adapter* using the Type C to Type A cable.

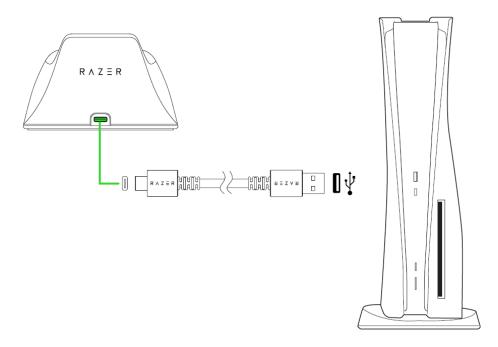


*Compatible with a 5V 1.4 A USB power adapter (not included).

2. Place the controller on the charging stand with the charging terminals of the controller aligned to the charging connector on the stand. While charging, the light bar on the controller will slowly blink in orange, and the status indicator of the charging stand is in solid orange.

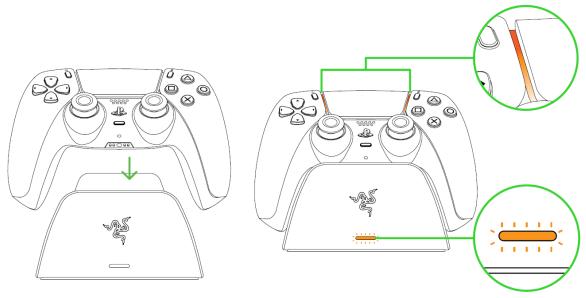

3. Wait for the controller to finish charging. Once fully charged, the light bar on the controller and the charging stand's status indicator will turn off.

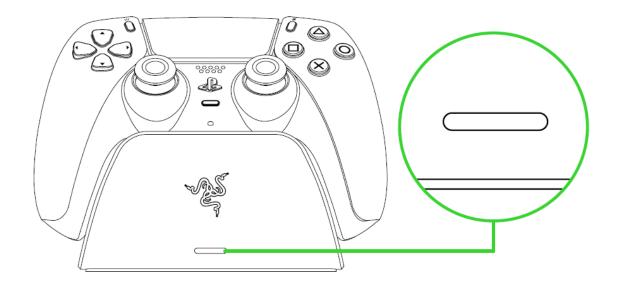

1 A depleted controller will fully charge in about 3 hours.

4. SAFETY AND MAINTENANCE

SAFETY GUIDELINES

In order to achieve maximum safety while using the Razer Quick Charging Stand, we suggest that you adopt the following guidelines:

Should you have trouble operating the device properly and troubleshooting does not work, unplug the device and contact the Razer hotline or go to support.razer.com for support. Do not attempt to service or fix the device yourself at any time.

Do not take apart the device and do not attempt to operate it under abnormal current loads. Doing so will void your warranty.

Keep the device and its components away from liquid, humidity or moisture. Operate the device and its components only within the specific temperature range of 0°C (32°F) to 40°C (104°F). Should the temperature exceed this range, unplug the device in order to let the temperature stabilize to an optimal level.

MAINTENANCE AND USE

The Razer Quick Charging Stand requires minimum maintenance to keep it in optimum condition. Once a month we recommend you unplug the charging stand, remove the attached controller, and clean it using a soft cloth or cotton swab to prevent dirt buildup. Do not use soap or harsh cleaning agents.

5. LEGALESE

COPYRIGHT AND INTELLECTUAL PROPERTY INFORMATION

©2021 Razer Inc. All rights reserved. Razer, the triple-headed snake logo, Razer logo, and "For Gamers. By Gamers." are trademarks or registered trademarks of Razer Inc. and/or affiliated companies in the United States or other countries.

"---", "PlayStation", "PS5", and "DualSense" are registered trademarks of Sony Interactive Entertainment Inc.

Razer Inc. ("Razer") may have copyright, trademarks, trade secrets, patents, patent applications, or other intellectual property rights (whether registered or unregistered) concerning the product in this guide. Furnishing of this guide does not give you a license to any such copyright, trademark, patent or other intellectual property right. The Razer Quick Charging Stand (the "Product") may differ from pictures whether on packaging or otherwise. Razer assumes no responsibility for such differences or for any errors that may appear. Information contained herein is subject to change without notice.

LIMITED PRODUCT WARRANTY

For the latest and current terms of the Limited Product Warranty, please visit <u>razer.com/warranty</u>.

LIMITATION OF LIABILITY

Razer shall in no event be liable for any lost profits, loss of information or data, special, incidental, indirect, punitive or consequential or incidental damages, arising in any way out of distribution of, sale of, resale of, use of, or inability to use the Product. In no event shall Razer's liability exceed the retail purchase price of the Product.

GENERAL

These terms shall be governed by and construed under the laws of the jurisdiction in which the Product was purchased. If any term herein is held to be invalid or unenforceable, then such term (in so far as it is invalid or unenforceable) shall be given no effect and deemed to be excluded without invalidating any of the remaining terms. Razer reserves the right to amend any term at any time without notice.